SANAKO LAB 100 STUDENT QUICK REFERENCE GUIDE

USER AUDIO PANEL

Recorder Controls

The recorder controls of the User Audio Panel are under teacher's control. The teacher disables the controls on the student panels by setting the locked mode.

Press **FF** to fast-forward the master and student track. Press twice to go directly to the end. Press during play mode to wind forward slowly.

Press **REW** to rewind the master and student track. Press twice to go directly to the beginning. Press during play to rewind slowly.

Press **STOP** to stop the playback and recordings.

Press **PLAY** to play the audio source.

Press **SPEAK** to play the master track and record to the student track.

Press **RECAP** to return to the beginning of the previous sentence on the master track.

Sanako Corporation
info@sanako.com
www.sanako.com

Function keys

CALL TEACHER
Press to call teacher. Press again to cancel the call.

Bookmark number keys
- Set bookmarks
- Search for bookmarks
- Remove bookmarks
- Answer a Quiz question
- Dial a phone number
- Select/change a file in Audio-on-Demand

TRUE / FALSE
Press to answer a Quiz question.

STUDENT WORKSTATION NUMBER

MODE
To repeat a loop of audio between two Bookmarks hold down Mode and press the appropriate Bookmarks. To switch repeat off hold down the Mode key and press Clear.

VOLUME CONTROLS
Set the volume for the audio source and the student.

CLEAR
Clear the PIN code or phone number in AP® Exam and Phone Conversation
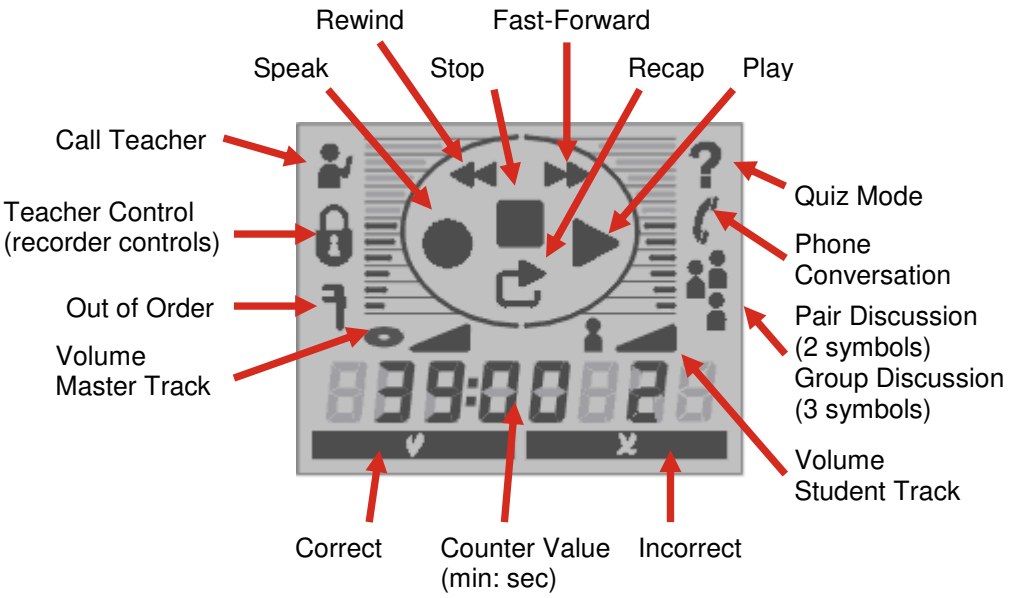
User Audio Panel Display